

Ford Maverick Fast Wireless Charging Kit


Quickcharge 3.0 Power Module Install

Tools needed: Fuse puller or pliers to remove interior fuse #3, 10mm hex socket driver


Wireless Charging will only be powered when car ignition is set to "ACC" or on position.



- 1)
- 2) Remove fuse #3 from fuse box, install fuse from #3 onto inline fuse holder

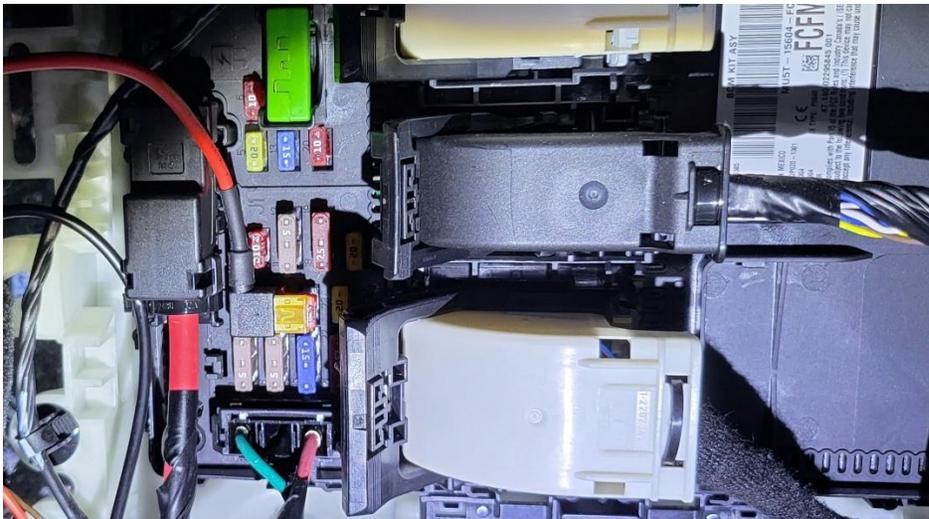

3) Using 10mm driver, loosen bolt as shown and attach ground wire here

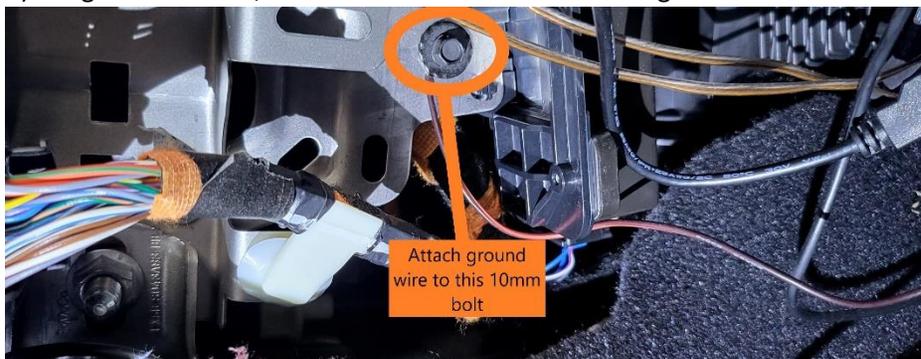

3) Plug in Type-C Quickcharge cable provided, route behind panel as pictured



4) Plug in Type-C cable to wireless pad, and install charging pad into cubby pocket



5) Adjust wireless pad for perfect fitment by sliding it forward or backward for proper alignment for charging

